



**SINGLE ZONE
CLIMATE ZONING SYSTEM**

Technical Manual

*www.zonemaster.com.au
www.polyaire.com.au*

©2015 Polyaire Pty Ltd

CONTENTS

Features	2
Application	2
Components	3
Connection Diagram	4
Installation	4
Commissioning Instruction	6
1. Initiating and Exit Setting Process	6
2. Room Temperature Sensor	6
3. Minimum Ventilation	6
4. Damper on/off Test	7
Trouble Shooting Guide	7
.....	
User Manual	8
Programming Mode	9
Appendix A - Single VAV Product Code	14
Appendix B - Specifications	15
Appendix C - Zonemaster Cable Tester	16
Appendix D - Cutout Template For Slimline VAV Touchpad	17

NOTE: All pictures in this manual are for illustration purpose only. The product you received may slightly vary in appearance.

Liability

Please read the instructions before installing this Zonemaster System.

Polyaire Pty Ltd does not accept any responsibility for loss or damage that may occur as a result of the installation of this System.

FEATURES

- Manual and programmable zone temperature control.
- Maintain's room temperature at comfortable level using an onboard sensor.
- LCD indicator for zone status and parameter display.
- User-friendly temperature and program setting.
- Real time clock with battery backup.
- 5-1-1 programmable temperature setting and start time.
- Returns to last setting after power drop.
- Programmable minimum ventilation.
- Max (or fully open) control.

APPLICATION

Zonemaster single VAV system is a fully featured and engineered system that is well suited to all ducted, reverse cycle, heating and cooling air conditioning systems for light commercial, residential or apartment applications. It is especially designed for an area with dynamic heat loads, and where a constant or exact temperature is required.

COMPONENTS



1) Touchpad

User can input control commands from the touchpad to turn a zone on/off and set temperature. The LCD on the touchpad displays clock, room temperature and zone status.



2) Damper Motor (Yellow)

Damper Motor drives the blade of the damper to modulate the air from ducting to the zone.



3) Supply Air Sensor

Supply air sensor measures the temperature of the supply air for cooling/ heating mode detection.



4) Power Supply

The 24VAC transformer provides power to the touchpad and damper.



5) Battery

3.6 V rechargeable battery for real time clock backup.



6) Mounting Bracket



7) Control Cable Premade 7m



8) Central Latch Adaptor

Connects the touchpad to the damper motor and power supply.

Connects the Centre Latched Adaptor with another damper motors (If 2 motors are used).

CONNECTION DIAGRAM

The cabling of the Zonemaster single VAV system is straightforward. The touchpad connects the damper motor and power supply in serial via an adaptor, and the temperature sensor can be plugged into the socket on the back of the touchpad, as shown in Figure 1 and Figure 2.

Figure 1.
Wiring Diagram
- One Motor


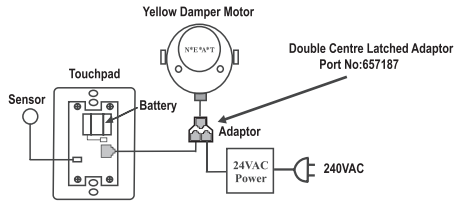


Figure 2.
Wiring Diagram
- Two Motors

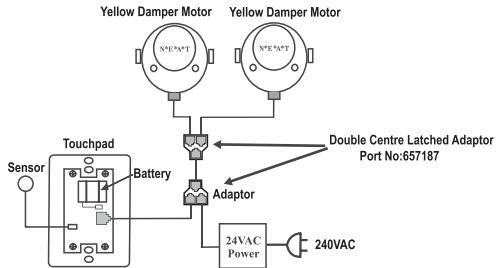


INSTALLATION

- 1) Plug the 24VAC power supply into the power-in port and a pre-tested control cable into the touchpad port in the adaptor. Plug the adaptor into the damper.

Warning
Zonemaster VAV system is compatible only with Polyaire's Yellow Motor.



- 2) Connect a pre-tested cable to the touchpad.
- 3) When power is applied, the LCD screen on the touchpad should display clock time and temperature. Otherwise, check the power supply and the cable.

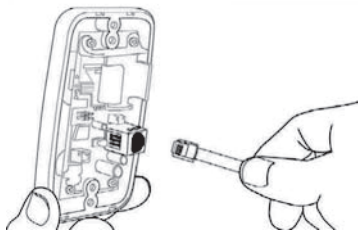


0:0 Am
25.0°C

- 4) Turn off the power and disconnect the touchpad. Position the touchpad at the right place. Ideally, its position is approximately 1.6m off the floor on the wall. Cut a hole on the wall using the cut-out template provided. Fit the cable through the wall cavity and connect the touchpad again.

Please note that the touchpad should not be exposed to direct sunlight and other heat sources.

- 5) Mount the supply air sensor in the supply air duct upstream from the motorised dampers. Fit the sensor cable through the wall cavity and plug into the socket on the back of the touchpad.
- 6) Connect the battery by plugging into the socket on the back of the touchpad.
- 7) Mount the touchpad onto the bracket in the wall cavity. Connect the cable to the 24VAC power supply. The LCD should show clock time and temperature.

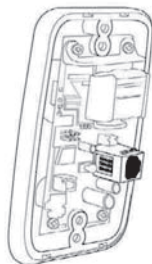

COMMISSIONING INSTRUCTION

The Zonemaster single VAV has two parameters, room temperature and minimum ventilation, that should be set in the commissioning stage.




1. Initiating and Exit Setting Process



Setting




10:30 Am
25.0°C




- 1) Hold down both  and  buttons for about 5 seconds until the LCD displays 'Setting' on the top line of the LCD screen.
- 2) At the setting mode, pressing  button at any time will return to the normal operation mode.

2. Room Temperature Sensor

The touchpad has an onboard sensor for temperature control. The sensor can be calibrated to provide more accurate temperature control as follows.




Sensor
24.5°C




- 1) Using an accurate probe to measure the temperature of the area you want to calibrate and record the value.
- 2) At the setting mode, press  button until the LCD displays the 'Sensor' screen.
- 3) Press  or  button to adjust the displayed value to the value recorded.

3. Minimum Ventilation


Customers may prefer minimum ventilation during the climate control. This ventilation allows a minimum airflow into the zone that is switched on. The amount of ventilation can be set from 0 to 30% open with a default of 0%.



Min Vent
0%

- 1) At the setting mode, press  button until the LCD displays the 'Min Vent' screen.
- 2) Press  or  button to adjust the percent value of the minimum ventilation as desired.

4. Damper on/off Test

- 1) Switch on the air conditioner.
- 2) Press  button to turn the zone on or off to check if the damper is correctly connected by feeling the air at the outlet. Refer to User's manual for the operation.

TROUBLE SHOOTING GUIDE

Problem	Suggested Action
Nothing is showing on touchpad LCD.	<ul style="list-style-type: none">• Check the power supply.• Check the cable and plug to the touchpad.
Touchpad display is not normal.	<ul style="list-style-type: none">• First disconnect the battery.• Reset the touchpad by turning the power supply off and on. If the display is normal, plug in the battery again.
No response from dampers when turning on or off.	<ul style="list-style-type: none">• Check the connection between the touchpad and the damper motor.• Check the 24V AC power supply.
Room temperature is beyond setpoint by $\pm 1^{\circ}\text{C}$.	<ul style="list-style-type: none">• Air Conditioner does not have enough capacity for the area.• Too much air coming from other areas.

Please contact distributors for any other problems not listed as above.

USER MANUAL

The single VAV touchpad has an LCD screen and six buttons, as shown in Figure 3. In normal operation mode, the LCD screen will display clock time and temperature.





Figure 3. Layout of the single VAV Touchpad

Zone On/Off Control


10:30 Am
25.0°C

10:30 Am
off


10:30 Am
SP 25°C

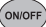- 1) In 'on' status, the LCD of the touchpad displays the zone temperature or setpoint. Press  button once to turn off the zone and the second line of the screen will display 'off'.
- 2) In 'off' status, pressing  button once will turn on the zone and the second line of the LCD screen will display the setpoint of the zone for 15 seconds, and then will return to the normal display of the zone temperature.





Zone Temperature Setting



10:30 Am
SP 25°C





10:30 Am
SP 24°C

- 1) In 'on' status, press  or  button once to allow the setpoint of the zone to be displayed on the second line of the LCD.
- 2) Press  or  button again to adjust the setpoint to the desired value.
- 3) The screen will return to zone temperature display in 15 seconds with no key being pressed.

Maximum Damper



10:30 Am
MAX

- 1) Press  button once, the barrel damper will be fully opened and the screen will display 'MAX' on the second line.
- 2) In MAX status, press  button again to return to the normal operation mode.

Programming Mode

Programmable zone temperature control is an important feature of the Zonemaster single VAV system. This system has a 5-1-1 program capability which means the system has an individual program for weekdays (Monday to Friday), Saturday and Sunday respectively. Each program has 4 programmable events per day: Wake, Day, Back and Sleep, which can be turned on or off individually. For these events, the user can adjust the start times and the cooling/heating temperature setting. In order to use the program, the user has to enable the program during the setup.

The Zonemaster single VAV system provides a battery backup real time clock to support the programming mode. The program is set in default mode from the factory with the settings listed in the following table.

Program		Wake	Day	Back	Sleep
Monday to Friday	Start time	6.30AM	8.00AM	5.30PM	10.00PM
	Set cool	24°C	off	24°C	30°C
	Set heat	21°C	off	21°C	17°C
Saturday	Start time	7.30AM	12.30PM	6.00PM	11.30PM
	Set cool	24°C	24°C	24°C	30°C
	Set heat	21°C	21°C	21°C	17°C
Sunday	Start time	7.30AM	12.30PM	6.00PM	11.30PM
	Set cool	24°C	24°C	24°C	30°C
	Set heat	21°C	21°C	21°C	17°C

The above default settings are explained as follows;

Monday to Friday:

6:30AM Wake, the zone turns on with a setpoint of 24°C for cooling mode and 21°C for heating mode.

8:00AM Day, the zone turns off.

5:30PM Back, the zone turns on again with a setpoint of 24°C for cooling mode, and 21°C for heating mode.

10:00PM Sleep, the zone's temperature setpoint is set to 30°C for cooling mode and 17°C for heating mode.

Saturday:

7:30AM Wake, the zone turns on with a setpoint of 24°C for cooling mode and 21°C for heating mode.

12:30PM Day, the zone's temperature setpoint is set to 24°C for cooling mode and 21°C for heating mode.


6:00PM Back, the zone's temperature setpoint is set to 24°C for cooling mode and 21°C for heating mode.










11.30PM Sleep, the zone's temperature setpoint is set to 30°C for cooling mode and 17°C for heating mode.

Sunday:

The program is the same as Saturday's.

Setting Clock and Week



- 1) Press  button once to select the clock and week setting.
- 2) Use  or  button to change the flashing hours to the desired value.
- 3) Press  button once more to select the minutes to be flashing.
- 4) Use  or  button to change the flashing minute to the desired value.
- 5) Press  button again to select week to set.
- 6) Use  or  button to change the weekday to the desired day.
- 7) It will return to the normal operation mode itself in 15 seconds with no key being pressed.

Program
disable

Program
enable

M-F Wake
6:30Am

M-F Wake
6:30Am

M-F Wake
disable
















M-F Wake
Cool 24°

M-F Wake
Cool off

M-F Wake
Heat 21°

M-F Wake
Heat off

Adjust Program Time

- 1) Press  button twice, the LCD shows the program status.
- 2) Factory default status of the program is disabled that means no program control. Pressing  button once will enable the program.
- 3) In enable status, pressing  button will select each of the program data to be adjusted. At the first screen, it shows the start time of the Wake event of the program for Monday to Friday.
- 4) Use  or  button to change the flashing hours to the desired value.
- 5) Press  button once to select minutes, and repeat step 4) to change the minutes.
- 6) If you do not want the event to happen press  button to disable it.
- 7) Press  button again, the LCD will show the temperature setpoint for cooling mode of the event.
- 8) Use  or  button to change the setpoint in cooling mode to the desired value or press  button to turn off the zone at the start time in cooling mode.
- 9) Press  button again, the LCD will show the temperature setpoint for heating mode of the event.
- 10) Use  or  button to change the setpoint in heating mode to the desired value or press  button to turn off the zone at the start time in heating mode.




M-F Day
8:00Am

M-F Back
5:30pm

M-F Sleep
10:00pm

Sat on 1
7:30Am

Sun on 1
7:30Am

- 11) Press  button again, the LCD will show the start time of the Day event of the program for Monday to Friday.
- 12) Follow step 4) to 10) to set the start time and cooling/heating setpoint of Day event or disable the event.
- 13) Press  button again, the LCD will show the start time of the Back event of the program for Monday to Friday.
- 14) Follow step 4) to 10) to set the start time and cooling/heating setpoint of Back event or disable the event.
- 15) Press  button again, the LCD will show the start time of the Sleep event of the program for Monday to Friday.
- 16) Follow steps 4) to 10) to set the start time and cooling/heating setpoint of Sleep event or disable the event.
- 17) Follow steps 3) to 16) to adjust the Saturday program.
- 18) Follow steps 3) to 16) to adjust the Sunday program.
- 19) It will return to the normal operation mode itself in 15 seconds with no key being pressed.

Programming Information Sheet

The following program tables are designed to assist the user in programming.

Program		Wake	Day	Back	Sleep
Monday to Friday	Start time				
	Set cool				
	Set heat				
Saturday	Start time				
	Set cool				
	Set heat				
Sunday	Start time				
	Set cool				
	Set heat				

APPENDIX A - SINGLE VAV PRODUCT CODE



Code	Items	Description
657153	Zonemaster Single Zone VAV	Single zone VAV touchpad (1) Rechargeable battery (1) Adaptor (1) Mounting bracket kit (1) Technical manual (1)
657186	Supply Air Sensor	Supply air sensor with 7M lead
657155	NEAT 24V Transformer Plug	24V transformer with plug
657161	Control Cable 7M	Pre-made control cable 7M
657187	Double centre latched adapter	Adapter 6P6C. Double Centre Latched (1) (ONLY IF 2 MOTORS ARE USED)

APPENDIX B - SPECIFICATIONS

Environmental Requirements

Operating temperature	0°C to 60°C
Altitude	0 to 2000 metres
Operating relative humidity	10% to 80%
Avoid static electricity hazards	
Avoid electromagnetic radiation sources	
Avoid dust contamination	
Avoid highly corrosive environments	

Touchpad

Power input	24VAC 50Hz
Power Consumption	0.5 VA

Touchpad Dimensions

Normal Style Single VAV	78mm Wide x 118mm High x 13mm Deep
Slimline Single VAV	76mm Wide x 116mm High x 4mm Deep


Transformer

Input Voltage	240VAC, 50Hz
Output Voltage	24VAC, 50Hz
Wattage	24W

Supply Air Sensor NTC type, 10k Ω at 25°C

Battery AAAM rechargeable battery, 3.6V

APPENDIX C - ZONEMASTER CABLE TESTER

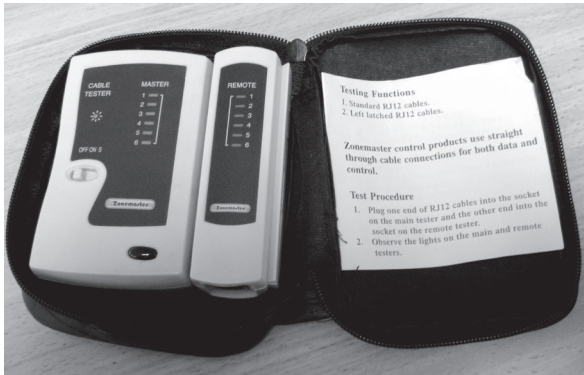

Cable Tester

(Item Number: 657089)

1) Application of the Cable Tester


Zonemaster cable tester is used to test all RJ12 cables before the start of the installation process thus reducing considerable diagnostic time if the fully installed system is subsequently found to have a problem.

2) Features of the Cable Tester

- Tests Centre Latched and Left Latched RJ12 cables.
- Portable, quick and easy to test cables.
- Bright LED's to indicate a faulty cable in the dark roof spaces.
- 9V battery operated.
- User Instructions provided.

APPENDIX D - CUTOUT TEMPLATE FOR SLIMLINE VAV TOUCHPAD

The template below can be used for cutting out the hole in the wall.

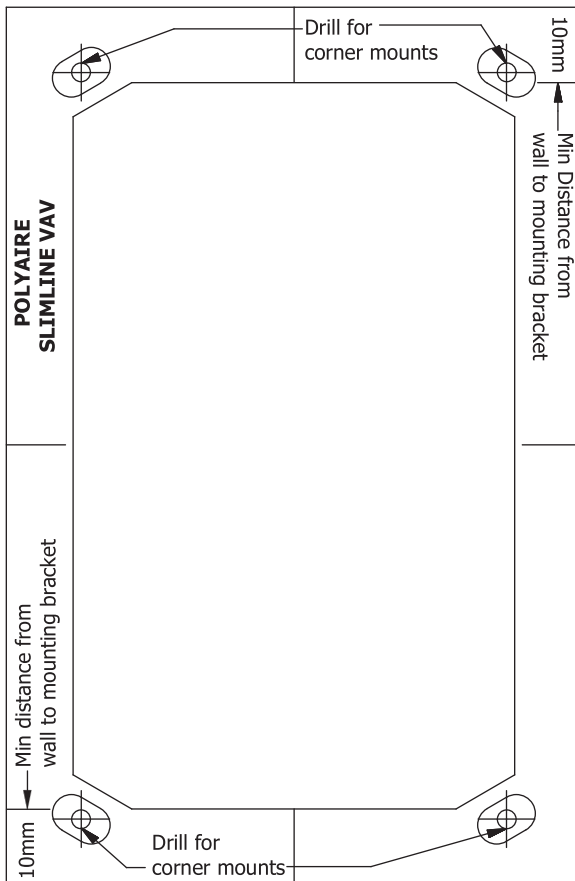



POLYAIRE PTY LTD

11-13 WHITE ROAD
GEPPS CROSS
SOUTH AUSTRALIA, 5094

TEL: (08) 8349 8466

FAX: (08) 8349 8446

www.zonemaster.com.au

www.polyaire.com.au